

Repair instruction

Description: C200 Float arm HT

Part number: 23726

Look for Service Centres, Point of Sale addresses and other information on: www.thetford-europe.com

Version:	V1
Date:	19/01/2007
Tools required:	-

A


C200 holding tank.
See picture for
position of float arm.




Remove the float
arm.

B

Make sure the float
arm retainer is
removed.

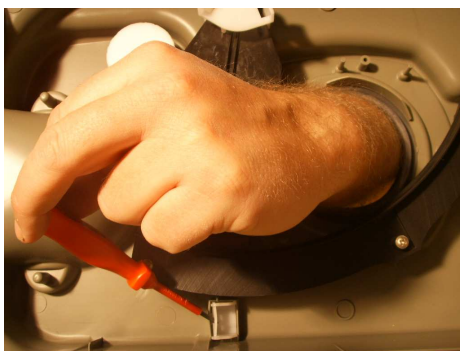

Float arm housing.

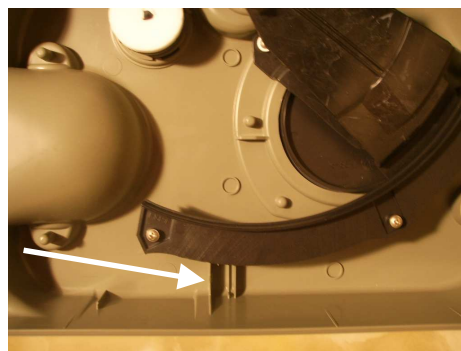

C

Place the new float
arm into the holding
tank with the magnet
side to the front.



Press the float arm
into his position till
you hear a click.



19/01/2007

Description: C200 Float
arm HT

C

Move the float arm
over the rib.

